




Bose SoundLink Mini Button Switch Circuit Board Replacement

Guide to replacing the button switch circuit board on the Bose SoundLink Mini speaker.

Written By: Jordan Smith

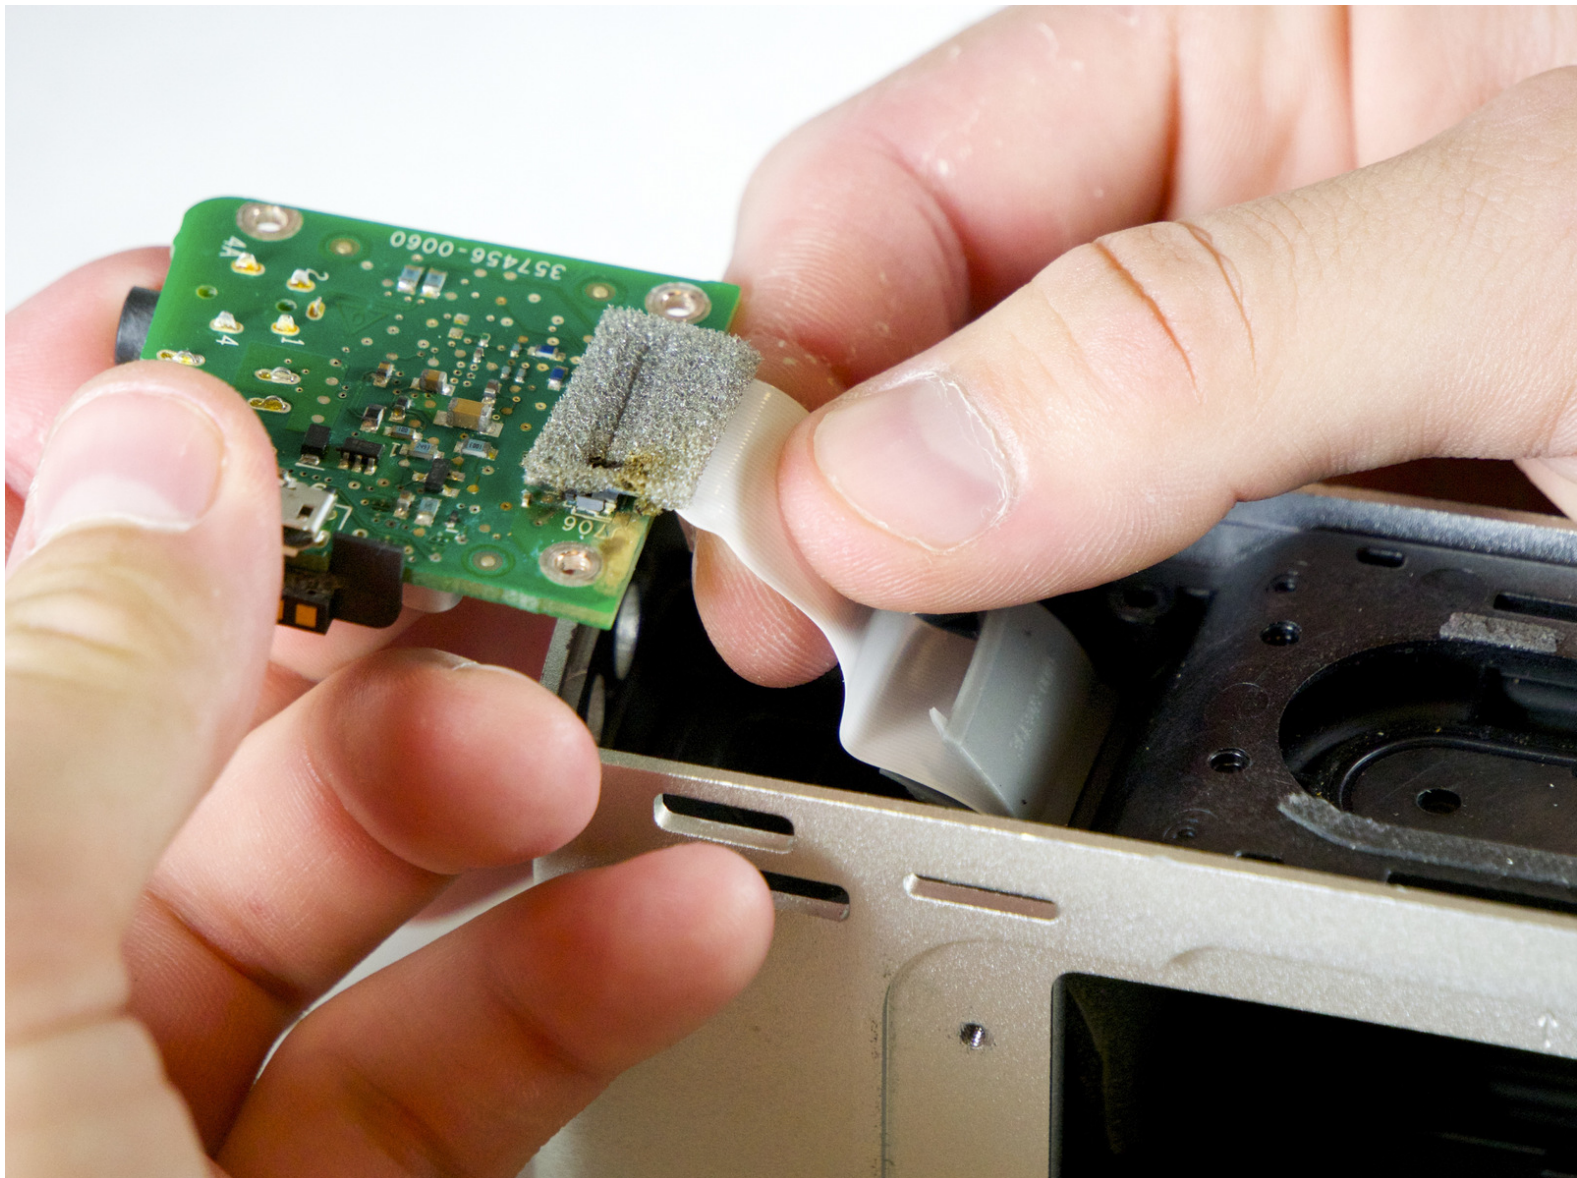

INTRODUCTION

The button switch circuit board is located deep within the body of the speaker. It may be necessary to replace this part if the buttons on the speaker no longer work properly. Make sure you have the necessary tools and follow the guide step by step to replace this part.



TOOLS:

- [Metal Spudger](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Peel back the rubber battery cover and remove the four circled 6.0 mm screws using a T8 Torx Screwdriver.

Step 2



- While holding the cover back, pull straight up on the battery to remove it.

Step 3 — Front/Back Protective Grille



- Insert the Metal Spudger between the rubber edge on the grille and the aluminum casing.
- ⓘ Place Metal Spudger in the location shown.

Step 4



- Slowly pry up the grille until the two tabs shown pop out.

⚠ Be very gentle, the grille will bend.

Step 5



- The grille is attached to the speaker with double sided sticky tape. To remove the grill gently pull upward while keeping tension to the right.


⚠ Be very gentle, the grille will bend.

Step 6




- Repeat steps to remove the back grille.

Step 7 — Battery Cover

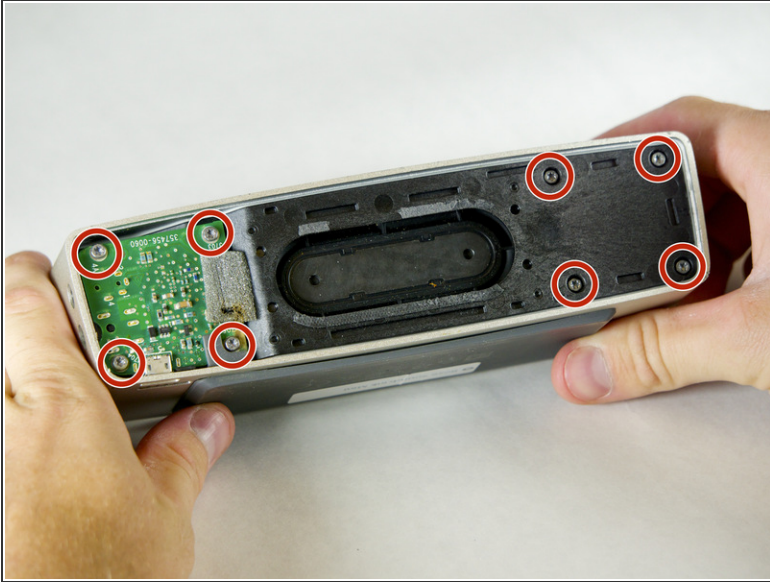


- Remove the four 15.0 mm screws on the left and the four 9.0 mm screws on the right using the T8 Torx Screwdriver.

Step 8

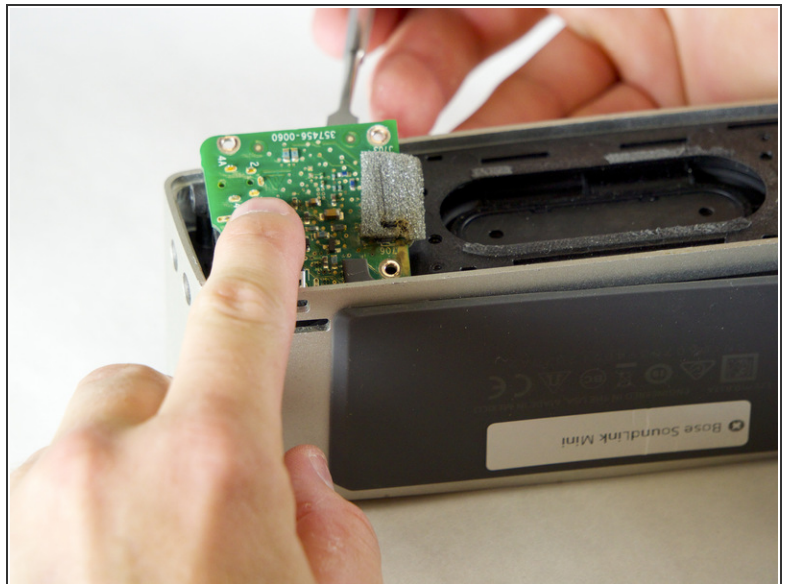


- Remove the circuit board by pushing it with your index finger in the direction shown while using a nylon or metal spudger to lift it up and out of place.

Step 9

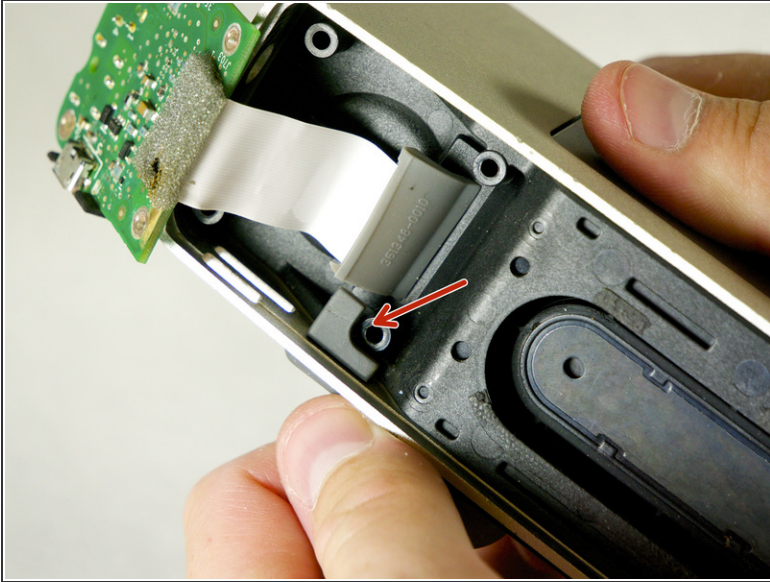


- Carefully pull on the battery cover until the rubber tab slides out of the aluminum casing.

Step 10 — Button Switch Circuit Board

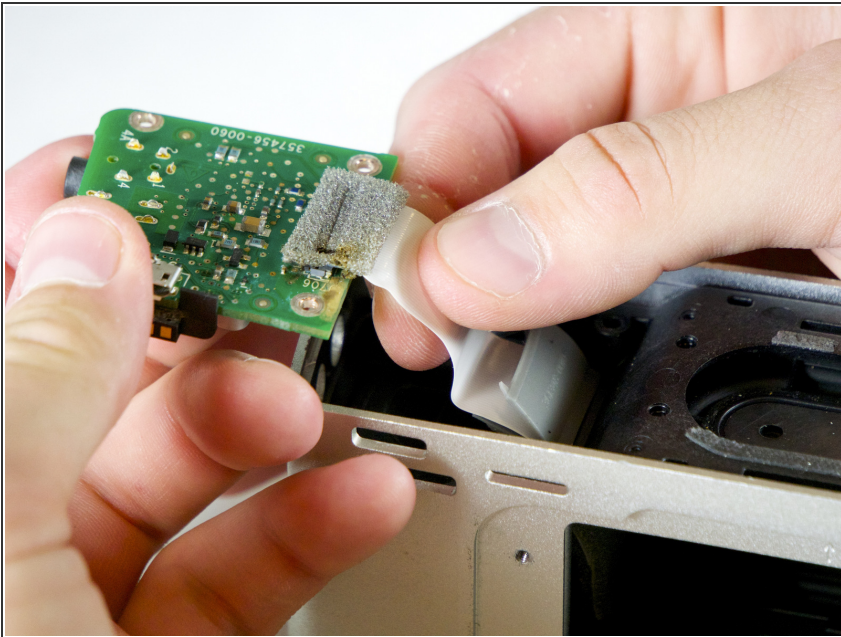


- Gently pull out the wire strip from the circuit board.

Step 11

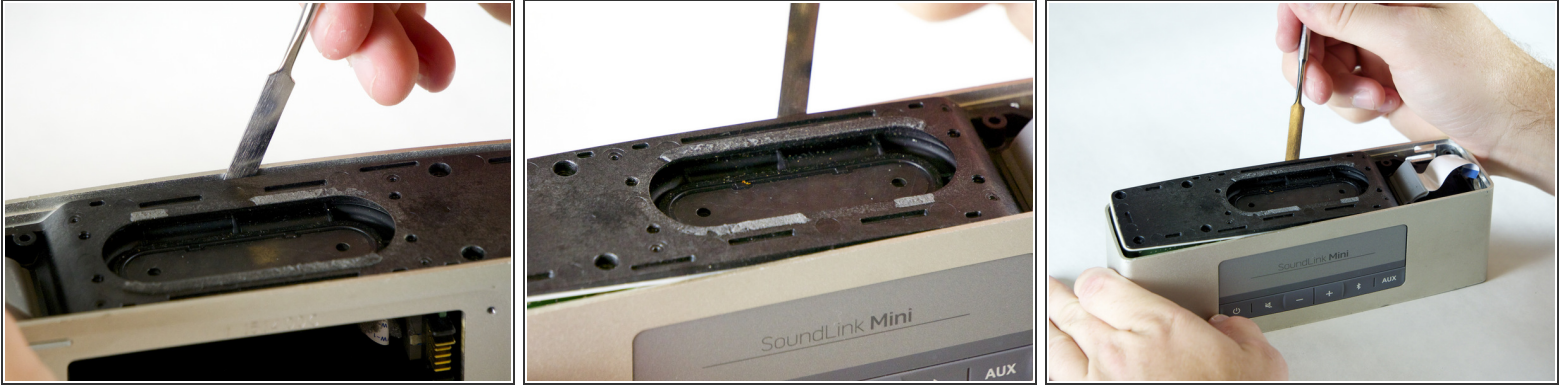


- Use a Metal Spudger to pry up the plastic divider.

Step 12

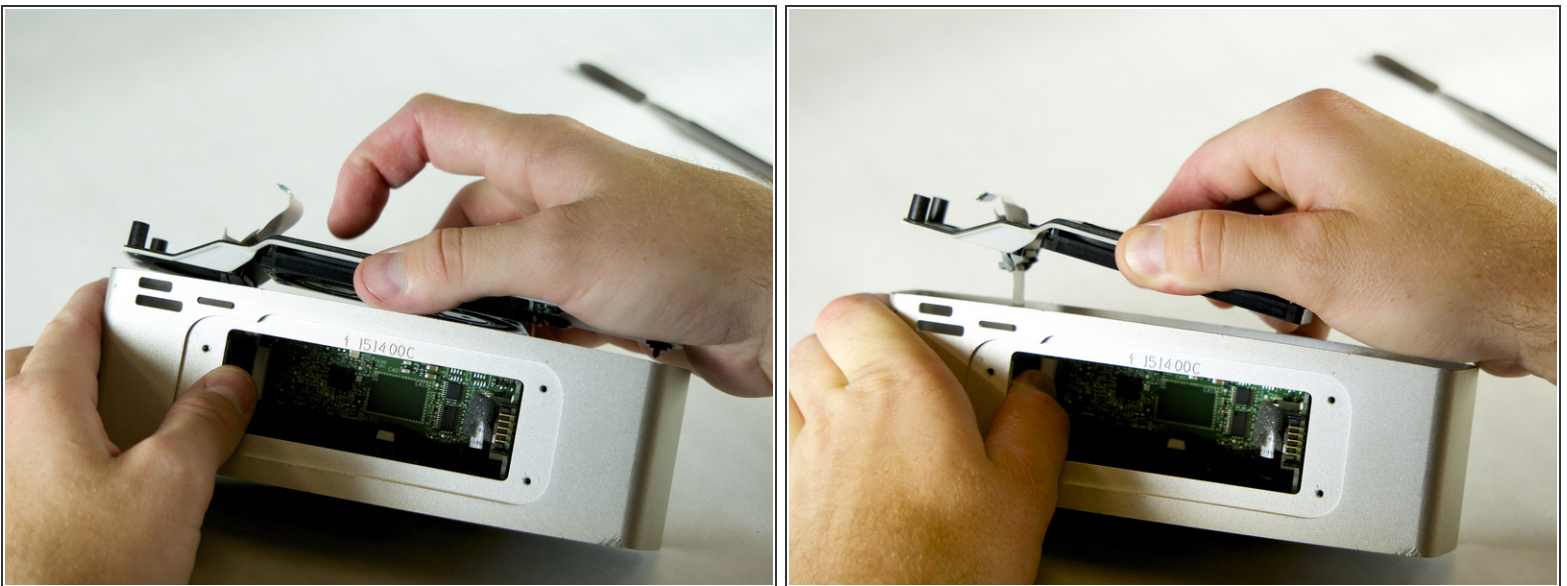

- When removing the plastic divider be careful not to damage the wire strip sliding through it.

Step 13

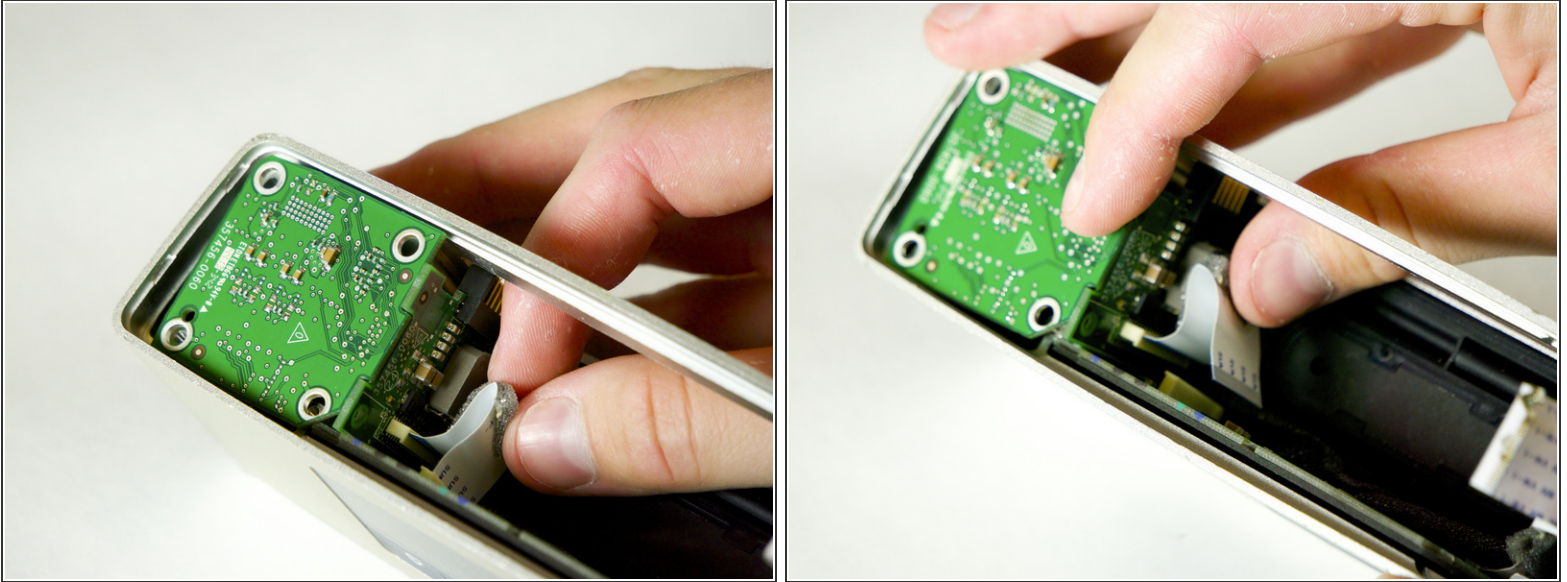


- Reach through the battery compartment hole and unplug the power strip shown.

Step 14





- Remove both circuit boards by wiggling them up and out of the casing.
 - Unplug the speaker wires connected and fully remove both circuit boards.
- i** When unplugging the speaker wires, squeeze the white connector piece to release the wires.

Step 15

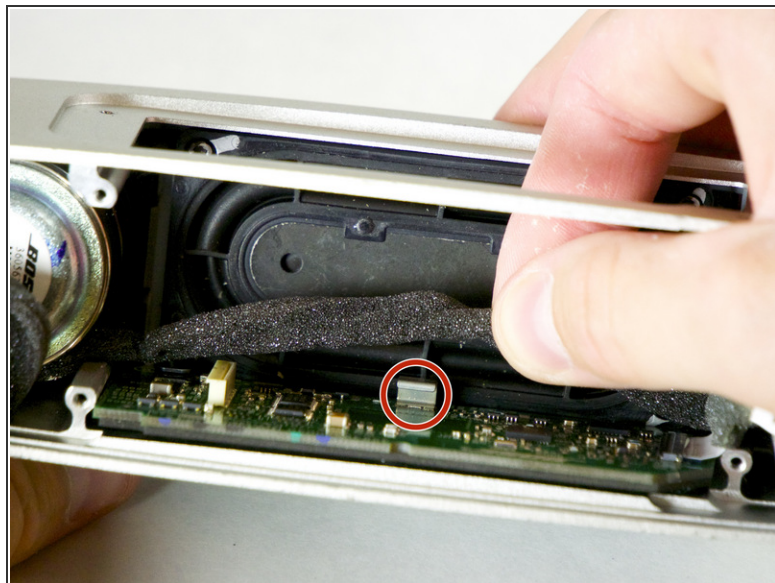

- Unhook the speaker wires clipped onto the button switch circuit board.

Step 16

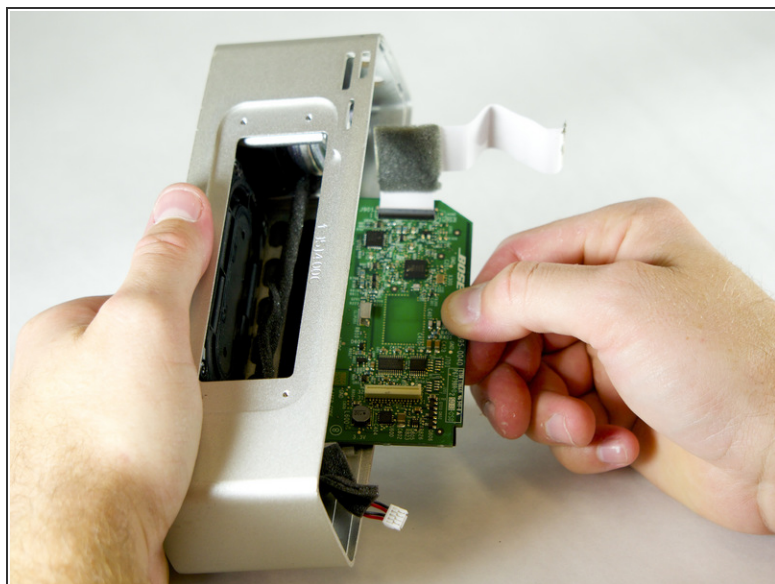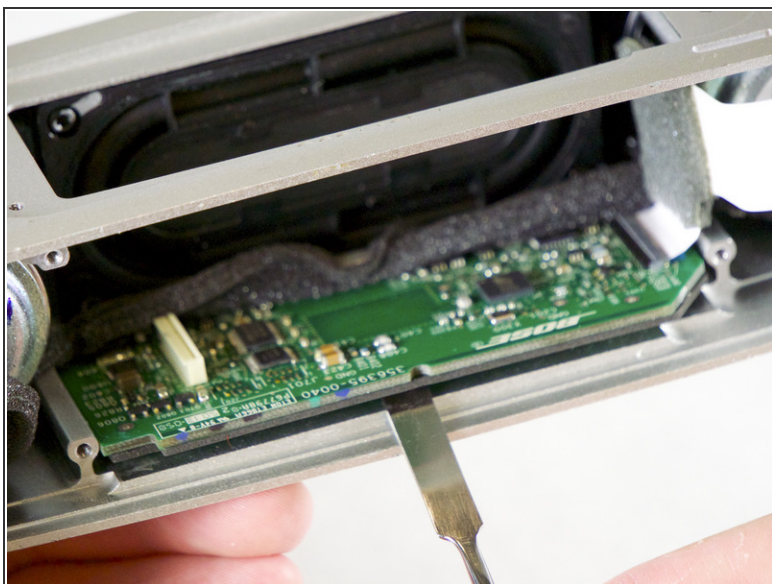

- Use a nylon or metal spudger to slightly lift up on the button switch circuit board.
- Pull the button switch circuit board straight out from the casing.

To reassemble your device, follow these instructions in reverse order.

